

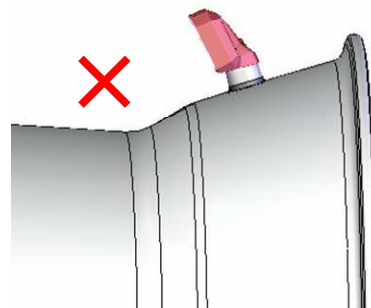
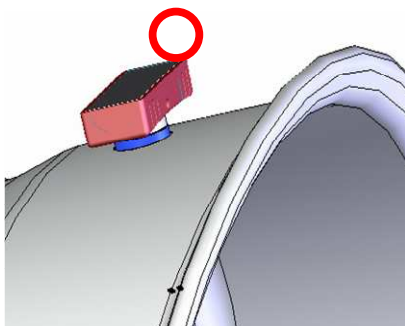
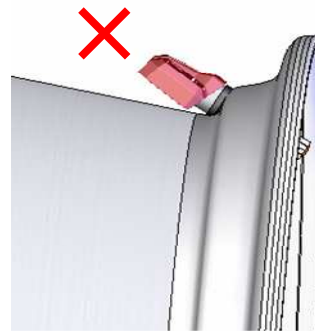


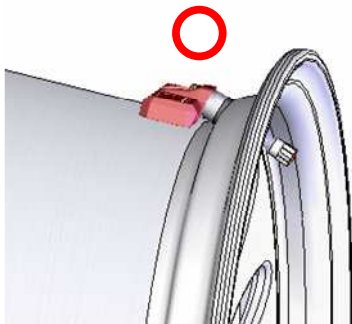

TPM Sensor Installation Instructions

1. Make sure and clean valve stem hole in rim of any corrosion or dirt
2. Remove washer, nut and cap from the valve stem on the sensor.
3. Push valve stem through the rim, install washer, tighten nut to $4\pm 0.5\text{Nm}$ then tighten cap.
4. Holding sensor body down against rim while tighten screw.

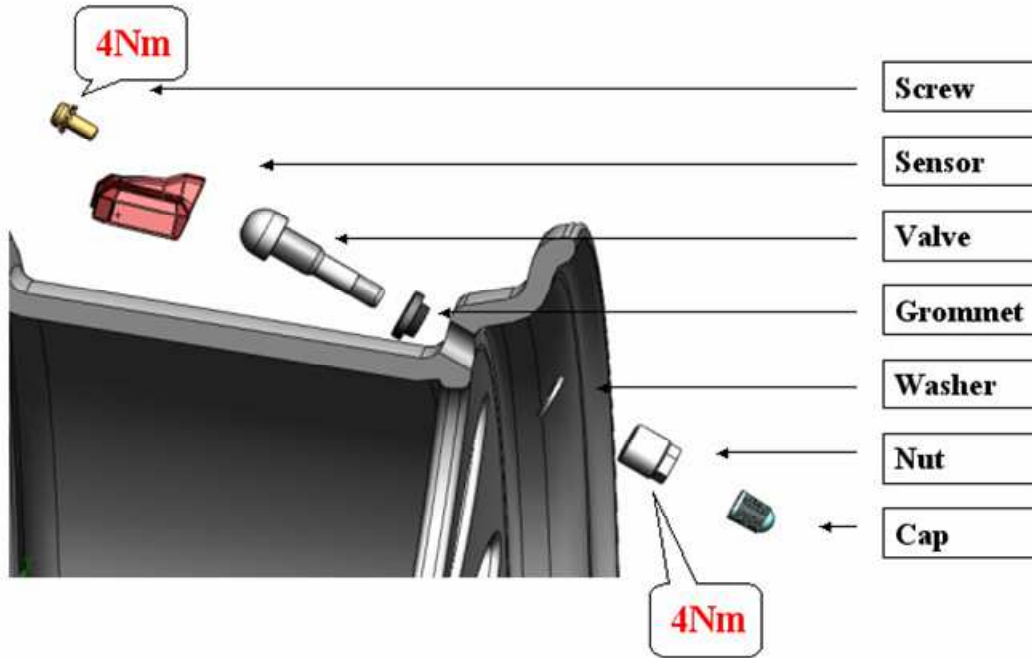

Each time a tire is serviced or dismantled, it is imperative to replace the grommet with Orange parts to ensure proper sealing.

It is imperative to replace the sensor if sensor is externally damaged (especially the plastic bridge part where the valve stem is connected.)